


Engine Code : D5204 D4 (VOLVO)

NOTICE: Please turn off ignition, put the car to sleep mode and start installation after ten minutes !

注意：安装前请先熄火，并在十分钟后再开始安装！

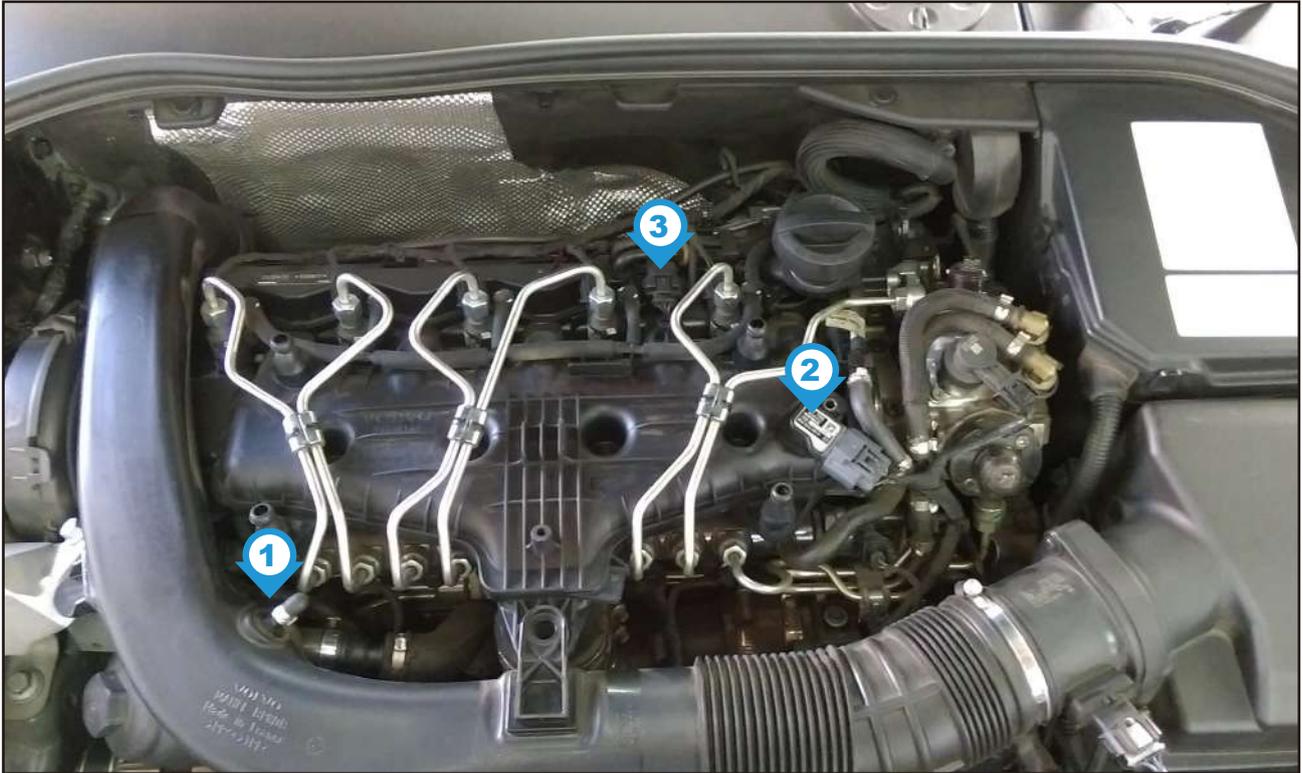

1 OP1 FUEL PRESSURE

2 OP2 MAP / GAUGE

3 CAMSHAFT

